

# CPCI Serial System 3+1 U

## User's Manual



**Product No.:**  
**24579-415**

---

| Rev. | Date updated  | Change          |
|------|---------------|-----------------|
| R1.0 | July 20, 2011 | Initial Release |

Impressum:

Schroff GmbH

D-75334 Straubenhardt, Germany

The details in this manual have been carefully compiled and checked - supported by certified Quality Management System to EN ISO 9001/2000

The company cannot accept any liability for errors or misprints. The company reserves the right to amendments of technical specifications due to further development and improvement of products.

Copyright © 2011

All rights and technical modifications reserved.

---

|          |   |           |
|----------|---|-----------|
| <b>1</b> | <b>Safety</b> .....                                       | <b>1</b>  |
| 1.1      | Intended Application .....                                | 1         |
| 1.2      | Safety Instructions .....                                 | 2         |
| 1.2.1    | Safety Symbols used in this document .....                | 2         |
| 1.3      | General Safety Precautions .....                          | 2         |
| <b>2</b> | <b>Product Definition</b> .....                           | <b>3</b>  |
| 2.1      | References and Architecture Specifications .....          | 3         |
| 2.2      | System Overview .....                                     | 4         |
| 2.3      | Subrack .....   | 4         |
| 2.4      | CPCI Serial Backplane .....                               | 5         |
| 2.4.1    | Backplane topology .....                                  | 6         |
| 2.5      | Power Supply .....  | 7         |
| 2.5.1    | ATX Power Supply .....                                    | 7         |
| 2.5.2    | Load Resistor .....                                       | 8         |
| 2.5.3    | Grounding/Earthing .....                                  | 8         |
| 2.6      | Cooling .....   | 9         |
| <b>3</b> | <b>Installation</b> .....                                 | <b>10</b> |
| 3.1      | General Installation Guidelines .....                     | 10        |
| 3.1.1    | Unpacking .....   | 10        |
| 3.1.2    | Ensuring Proper Airflow .....                             | 10        |
| 3.2      | Rack-Mounting .....                                       | 11        |
| 3.3      | Initial Operation .....                                   | 11        |
| <b>4</b> | <b>Service</b> .....                                      | <b>12</b> |
| 4.1      | Technical support and Return for Service Assistance ..... | 12        |
| 4.2      | Declaration of Conformity .....                           | 12        |
| 4.3      | Scope of Delivery .....                                   | 13        |
| 4.4      | Accessories .....   | 13        |
| 4.5      | Spare Parts .....   | 13        |
| <b>5</b> | <b>Technical Data</b> .....                               | <b>14</b> |
| <b>6</b> | <b>Dimensions</b> .....                                   | <b>15</b> |



# 1 Safety

## 1.1 Intended Application

The CompactPCI Serial system, described in this manual, is intended as a platform for a microcomputer system based on the CompactPCI Standard CPCI Serial CPCI-S.0.

The case systems are designed for protection class IP 20 and can be used only in the resp. environments.

CPCI system subracks are not end-products, so there is no valid approval for this unit. In order to enable stand-alone functionality, additional elements are required. An operational system is achieved only by way of appropriate CPCI Serial boards.

The completion and final testing of the units have been carried out, or at least supervised, by qualified technicians. These instructions are directed exclusively to these qualified technicians i.e. engineers, trained and qualified electricians etc.




Make sure that:

- the finished system complies with the safety regulations currently applicable in the country it is going to be used.
- the finished system complies with all other regulations and specifications at the place and country of use, e.g. interference limits, approval by the telecommunications authorities.


## 1.2 Safety Instructions

The intended audience of this User's Manual is system integrators and hardware/software engineers.

### 1.2.1 Safety Symbols used in this document

|  |  |
|--|--|
|   | <p><b>Hazardous voltage!</b></p> <p><i>This is the electrical hazard symbol. Familiarise yourself with the danger of electrical voltages and the safety precautions to avoid accidents before starting to work with parts that carry dangerous voltages.</i></p>   |
|   | <p><b>Caution!</b></p> <p><i>This is the user caution symbol. It indicates a condition where damage of the equipment or injury of the service personnel could occur. To reduce the risk of damage or injury, follow all steps or procedures as instructed.</i></p> |
|  | <p><b>Danger of electrostatic discharge!</b></p> <p><i>Static electricity can damage sensitive components in a system. To avoid damage, wear ESD wrist straps or at regular intervals touch blank enclosure parts.</i></p>   |

## 1.3 General Safety Precautions

|   |   |
|---|---|
|  | <p><b>Warning!</b></p> <p><i>Voltages over 60 VDC can be present in this equipment. This equipment is intended to be accessed, to be installed and maintained by qualified and trained service personnel only.</i></p> <p><i>This equipment is designed in accordance with protection class 1!<br/>It must therefore be operated only with protective GND/earth connection!</i></p> |
|---|---|

- Service personnel must know the necessary electrical safety, wiring and connection practices for installing this equipment.
- Install this equipment only in compliance with local and national electrical codes.

## 2 Product Definition

The Schroff CPCI Serial system consists of:

- A shielded subrack with front card cage for 3 U boards according to IEEE 1101.x, IEC 20297.x and the CompactPCI Standard CPCI Serial (CPCI-S.0)
- A 9 slot 3 U CPCI Serial backplane with Single Star Ethernet routing, Part No.: 23007-612 (Full Mesh routing available on request)
- An ATX power supply (300 W) with wide range input, IEC320-C14 connector and mains/line switch
- 1 U Fan Tray with 2 axial Fans (140 m<sup>3</sup>/h (85 cfm)) for the active cooling of the boards
- Drive holder for an optional slim line DVD drive
- Drive holder for an optional 3.5" HDD

### 2.1 References and Architecture Specifications

- User Guide Schroff CPCI Serial Backplanes 23007-61x  
Order no.: 63972-277

Further information can also be found in the catalogue „Electronic Packaging“ and on the internet under [www.schroff.biz](http://www.schroff.biz)

## 2.2 System Overview

Figure 1: System Overview



12311820

- |   |  |   |                                  |
|---|--|---|----------------------------------|
| 1 | Drive holder with front panel for an optional 3.5" HDD | 5 | Front panel 3 U, 8 HP            |
| 2 | Drive holder for an optional slim line DVD drive       | 6 | Handle                           |
| 3 | ATX Power Supply                                       | 7 | Front Card cage with guide rails |
| 4 | Fan Tray with 2 fans                                   |   |                                  |

## 2.3 Subrack

The 4 U chassis is based on the Schroff europacPRO system with EMC shielding. The front card cage provides 9 CPCI Serial slots.

The lower guide rails of the card cage are equipped with ESD clips.



### Variations

The Schroff assembly service can customize your system with:


- Different Backplane configurations
- Drive mounting cassettes
- Special power supplies

More information in the catalogue or at [www.schroff.biz](http://www.schroff.biz)



## 2.4 CPCI Serial Backplane

Figure 2: Backplane front and rear view

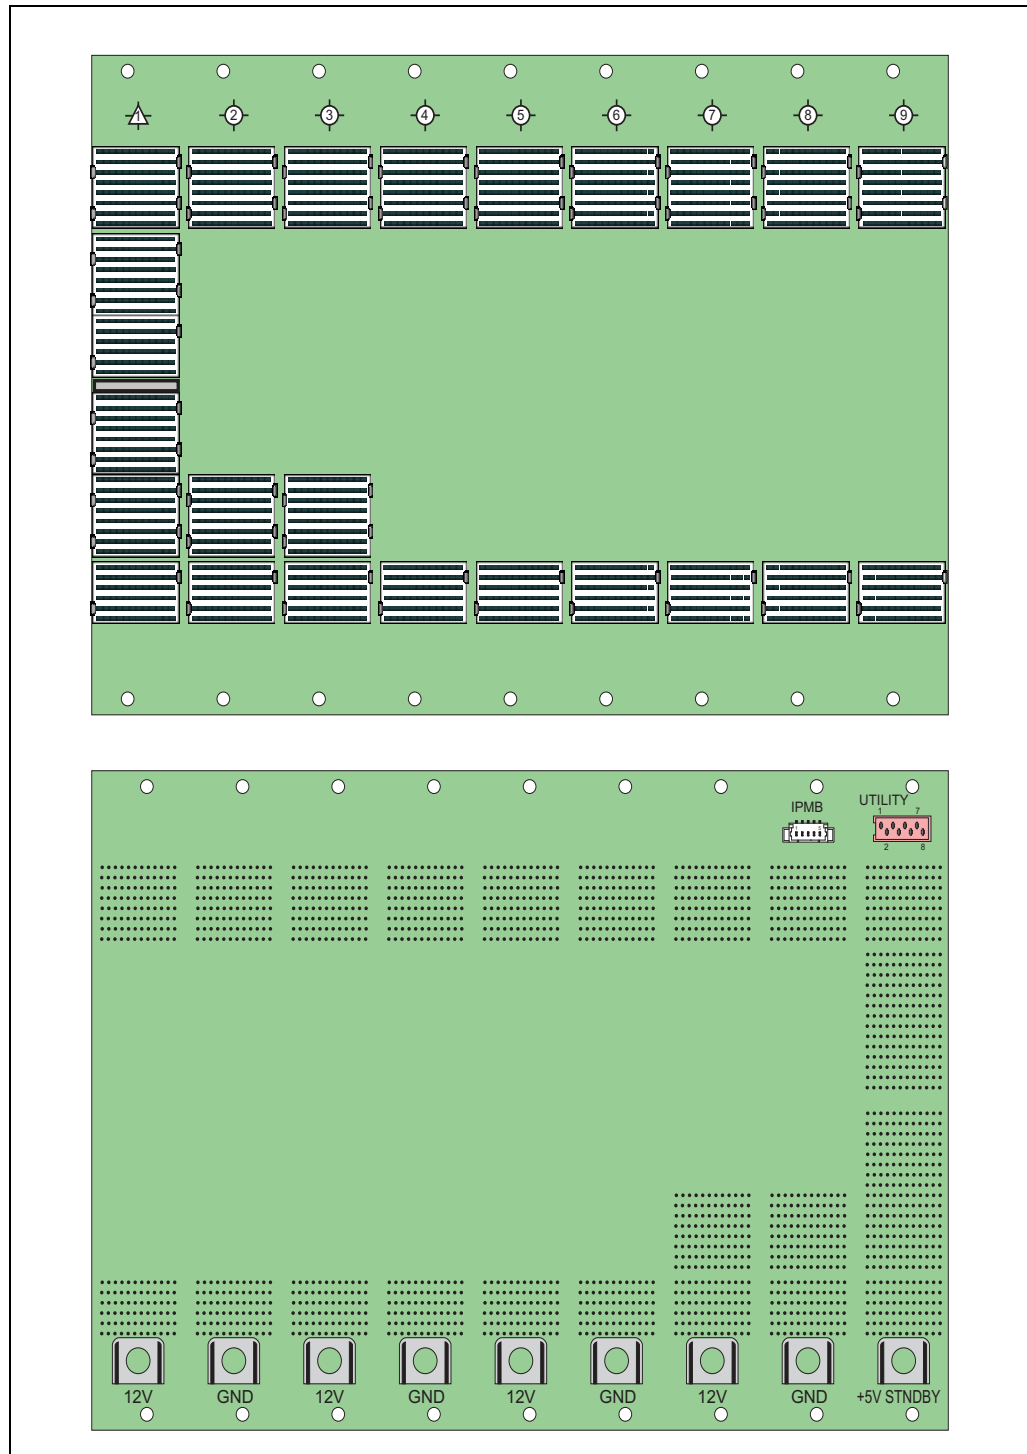

### 2.4.1 Backplane topology

The CPCI Serial backplane with 9 slots supports the full set of serial links at all slots.

The serial links (SATA/SAS, USB2/3, PCIe) are arranged as a Single Star architecture.

Ethernet is implemented by 4 differential pairs in Single Star routing to support 10/100/1000/10GBase-T. (Full Mesh routing available on request)

More information in the Schroff Backplane manual, order no.: 63972-277

Figure 3: Backplane Topology


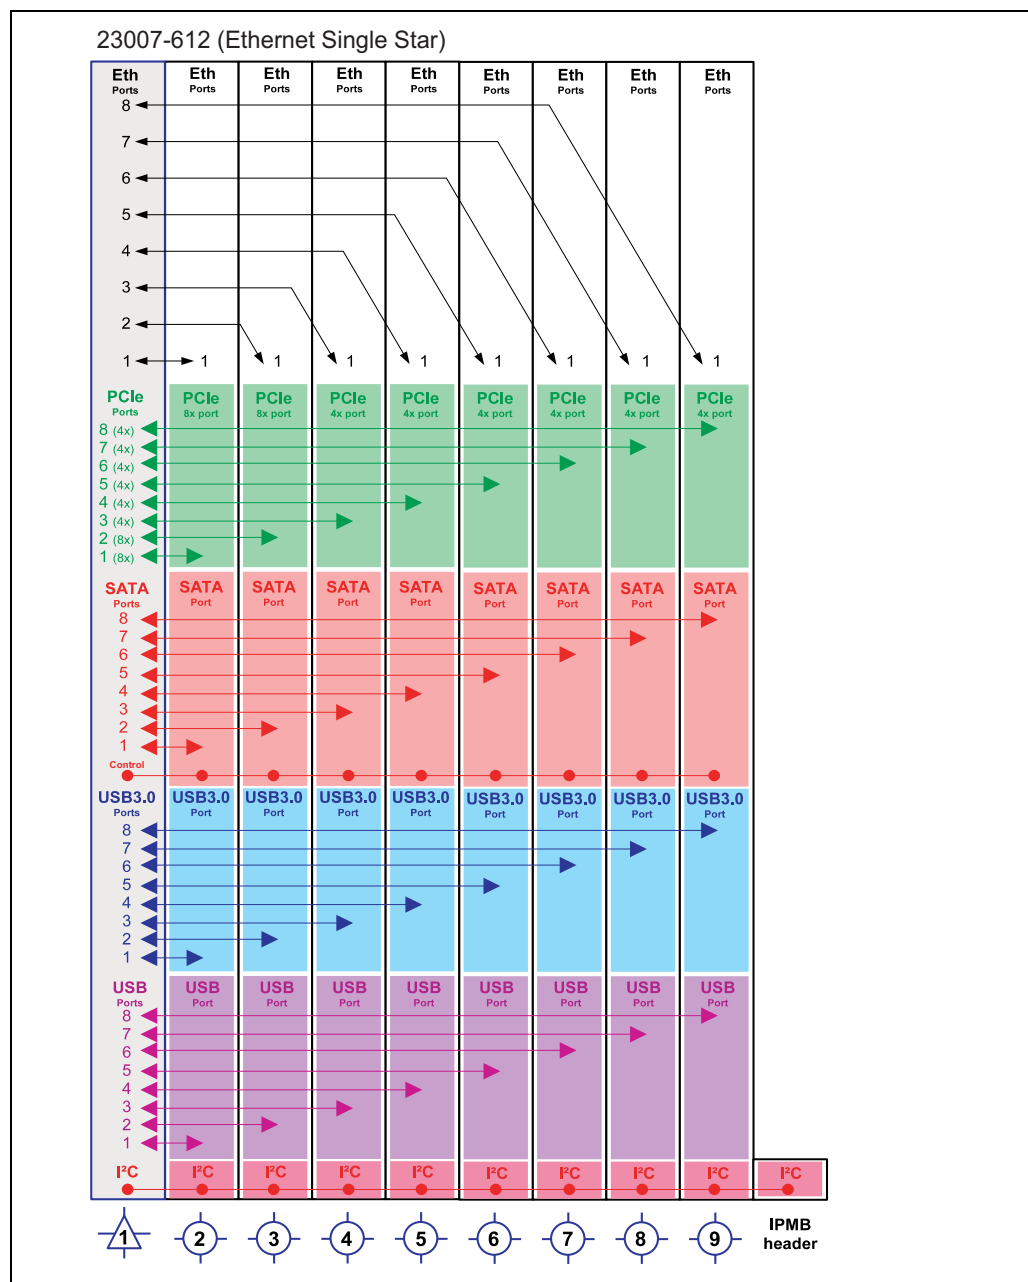




Figure 4: Backplane Topology (Option)

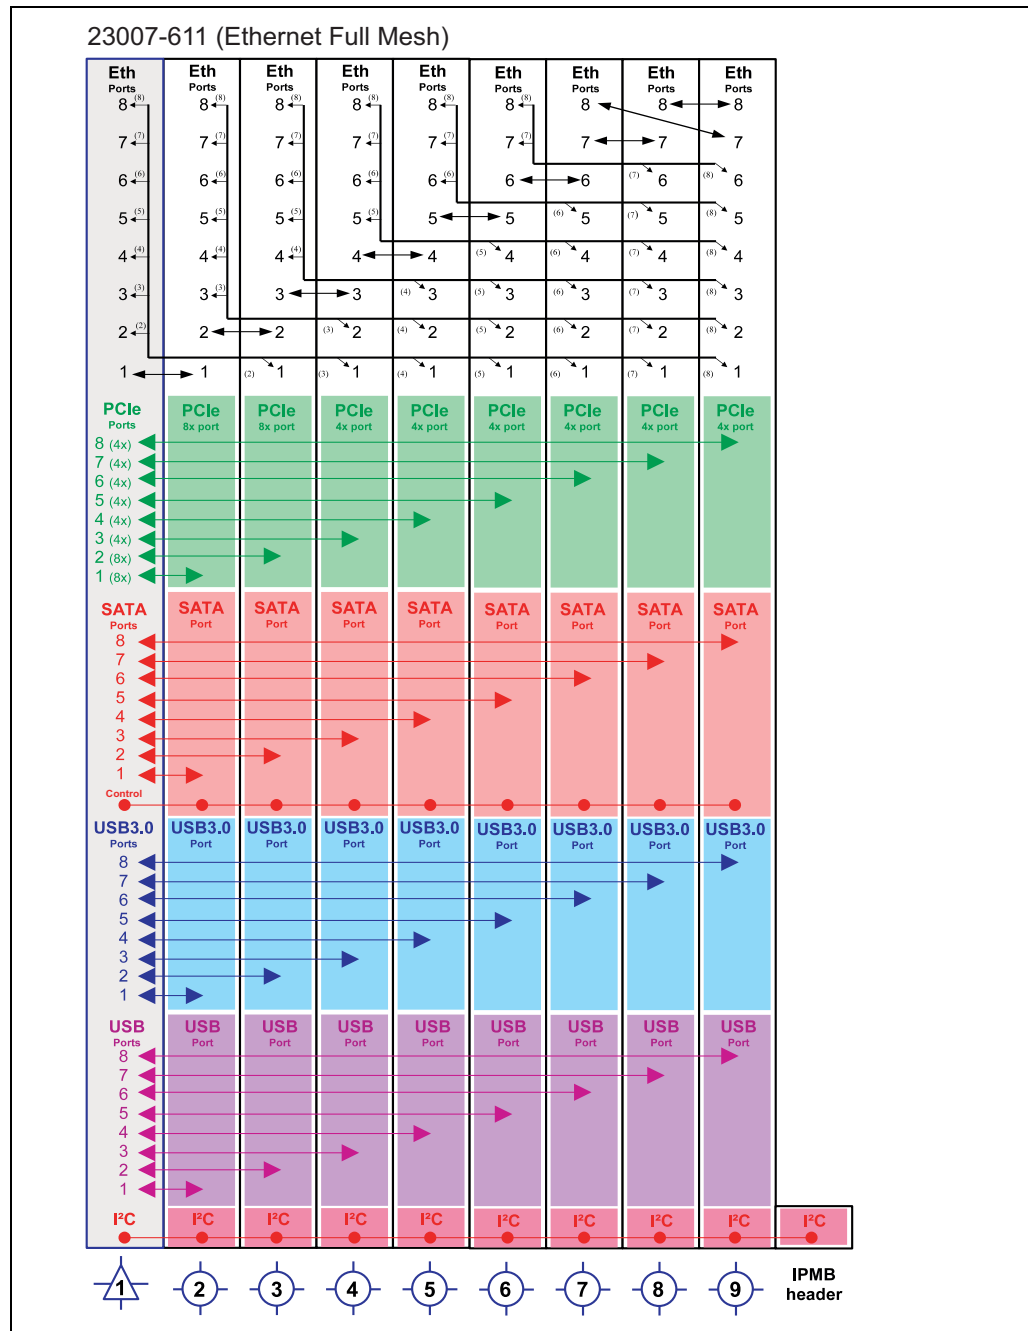

## 2.5 Power Supply

|   |  |
|---|--|
|  | <p><b>Hazardous voltage!</b></p> <p><i>Parts of the power supply may be exposed with hazardous voltage. Always remove mains/line connector before carry out any assembly work.</i></p>   |
|  | <p><b>Caution!</b></p> <p><i>Your system has not been provided with a AC power cable. Purchase a AC power cable that is approved for use in your country. The voltage and current rating of the AC power cable should be greater than the ratings marked on on the product's electrical ratings label.</i></p> |

Power is provided through a 300 W ATX power supply with wide range input, IEC 320-C14 connector and mains on/off switch. The power supply is located at the front to the left of the card cage behind a front panel.

### 2.5.1 ATX Power Supply

Table 1: Techn. Data


|                        |   |
|------------------------|---|
| Input voltage          | 90 ... 264 VAC, active PFC  |
| Input frequency        | 47...63 Hz  |
| Input current          | 6 A (115 V) / 3 A (230 V)   |
| Output (max)           | 5 V / 35 A; 3,3 V / 28 A, <b>12 V / 22 A</b> , -12 V / 0,8 A)       |
| Output (min)           | 5 V / 0,5 A; 3,3 V / 0 A, 12 V / 0,5 A, -12 V / 0,0 A)              |
| Inrush Current         | 44/87 A (115/230 VAC)   |
| Efficiency             | >70%/75% (115/230 VAC)  |
| Overload protection    | 110...150%, switch-off  |
| Overvoltage protection | +3,3 V (+3,9...+4,3 V), +5 V (+5,7...+6,5 V), +12 V (+13,6...+15 V) |
| Ripple                 | +3,3 V 50 mV / +5 V 50 mV / +12 V 120 mV / -12 V 150 mV             |
| Load regulation        | +3,3 V ±5% / +5 V ±5% / +12 V +7/-5% / -12 V ±5%                    |
| Hold up time           | >16 msec.   |
| Power Good Signal      | Power on delay 100...500 msec, Power off delay 1 msec.              |
| Insulation Voltage     | Input/Chassis 3100 VDC, Input/Output 4242 VDC.                      |
| Earth Leakage Current  | <3,5 mA (115/230 VAC)   |
| Operating temperature  | -10...+70 °C  |
| Derating               | From 50...+70 °C 1%/°C  |
| Storage temperature    | -20...+80 °C  |
| Humidity               | 10...90% RH, non-condensing   |
| MTBF                   | >100.000 h at +50 °C, without fan                                   |
| Safety                 | EN 60950 / UL 60950   |
| EMV                    | CE  |
| Fan                    | Ball bearing fan  |
| Dimensions             | 140 x 150 x 86 mm, ±0,5mm   |

For temperatures <20°C a higher min. output current is required.

## 2.5.2 Load Resistor

The ATX PSU requires minimum loads at the 5 V and the 12 V outputs. Because the CPCI Serial Backplane need only 12 V supply voltage, a load resistor (10 Ohms / 5 W) is connected to the 5 V output.

Figure 5: Airflow

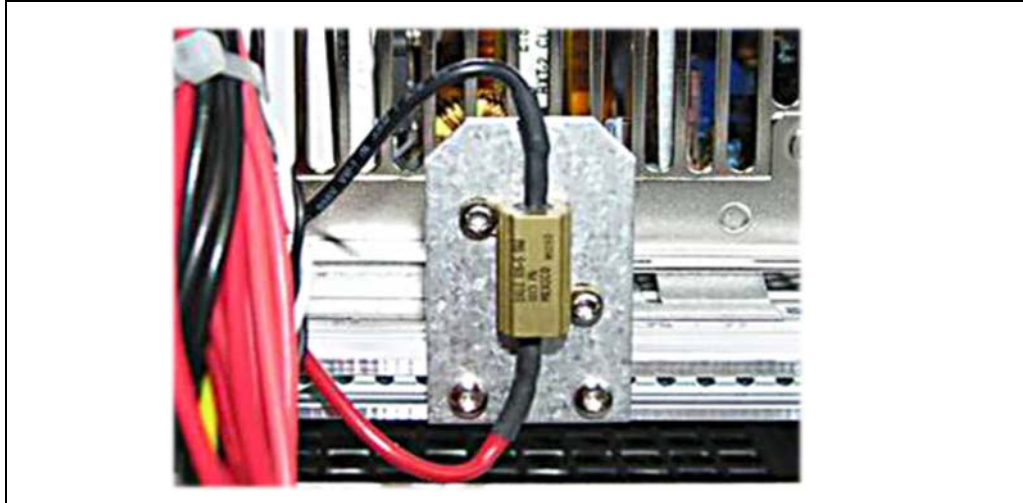

12311823

## 2.5.3 Grounding/Earthing



### Caution!

*The unit is designed in accordance with protection class 1! It must therefore be operated with protective earth/GND connection. Use only a three conductor AC power cable with a protective earth conductor that meets the IEC safety standards!*

## 2.6 Cooling

The boards are cooled by forced air convection through two 12 VDC axial fans (140 m<sup>3</sup>/h (85 cfm)).

The fans are located in a hot-swappable fan tray.


The operating temperature is from 0°C to 50°C.



**Caution!**

*To maintain proper airflow, all open slots must be covered with filler panels. The filler panel should include an airflow baffle that extends to backplane.*

**Figure 6: Airflow**

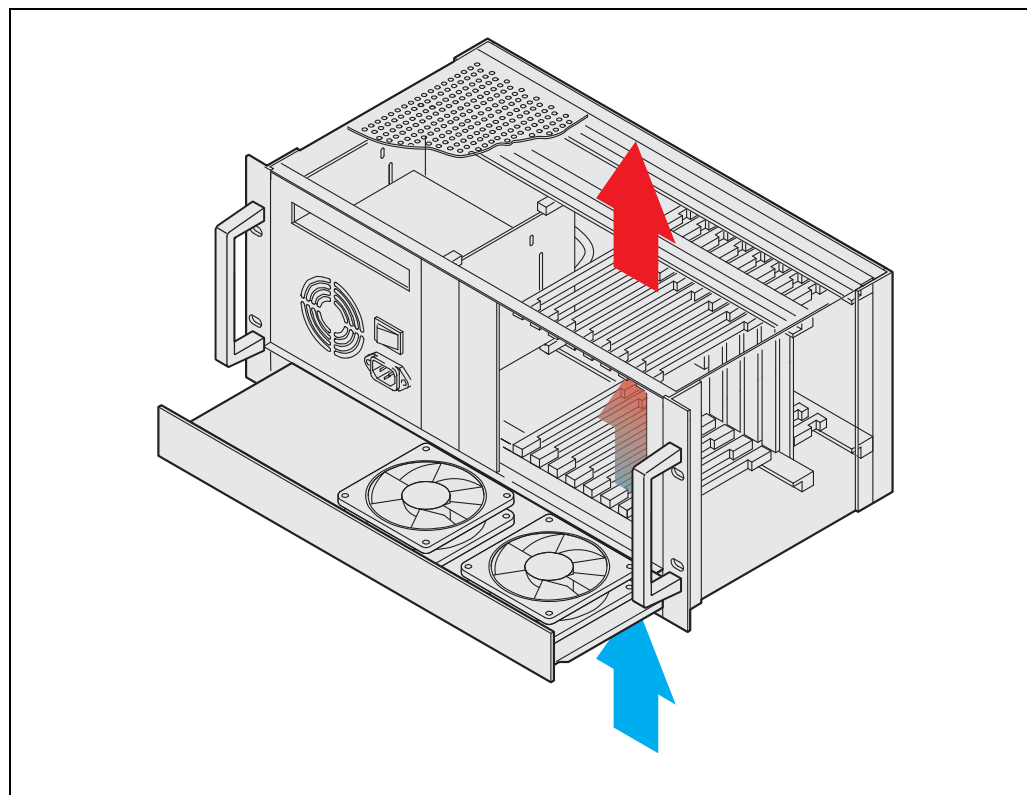

12308833

## 3 Installation

### 3.1 General Installation Guidelines

#### 3.1.1 Unpacking



**Caution!**

*When opening the shipping carton, use caution to avoid damaging the system.*

Consider the following when unpacking and storing the system:

- Leave the system packed until it is needed for immediate installation.
- After unpacking the system, save and store the packaging material in case the system must be returned.

If the packaging is damaged and possible system damage is present, report to the shipper and analyze the damage.

#### 3.1.2 Ensuring Proper Airflow

- Maintain ambient airflow to ensure normal operation. If the airflow is blocked or restricted, or if the intake air is too warm, an over temperature condition can occur.
- Ensure that cables from other equipment do not obstruct the airflow through the systems.
- Use filler panels to cover all empty chassis slots. The filler panel should include an airflow baffle that extends to backplane. The filler panel prevents fan air from escaping out of the front of an open slot.



***Filler Panels and Air Baffles***

*Air baffles and front panels with air baffles are available in the Schroff catalogue or at [www.schroff.biz](http://www.schroff.biz)*

## 3.2 Rack-Mounting

This subrack system can be installed in 19" equipment racks. The rack must be accessible from the front and rear for equipment installation.



### **Mounting Kit**

*A rack mounting kit comes with the system.*

### **Mounting Instructions:**

- Ensure that the rack is constructed to support the weight and dimensions of the system.
- Install any stabilizers that came with your equipment rack before mounting or servicing the system in the rack.

Load the rack from the bottom to the top, with the heaviest system at the bottom, avoid uneven mechanical loading of the rack.

## 3.3 Initial Operation



### **Warning!**

*This equipment is intended to be accessed, to be installed and maintained by qualified and trained service personnel only.  
This equipment is designed in accordance with protection class 1!  
It must therefore be operated only with protective GND/earth connection!*

- Ensure that the system has not been damaged during transport, storage or assembly.
- Check the Protective Earth (PE) resistance, should be < 0,1 Ohm.
- Switch on the system and check the supply voltage directly on the backplane connectors before the board assembly.  
**Note:** The ATX power supply requires a minimum load!
- Plug-in the boards
- Cover all open Slots with filler panels.



## 4 Service

### 4.1 Technical support and Return for Service Assistance

We generally recommend to return the complete system. For all product returns and support issues, please contact your Schroff sales distributor or [www.schroff.biz](http://www.schroff.biz).

We recommend that you save the packing material. Shipping without the original packing material might void the warranty.

### 4.2 Declaration of Conformity

SCHROFF CompactPCI systems are developed and manufactured according to EN 60950-1.

SCHROFF CompactPCI systems are not end-products with independent functionality as described in the definition of the EMC regulations, and therefore a CE marking is not required. However, when CPCI Serial cards are assembled according to specification, the systems fulfill the requirements in accordance with EMC Directive 2004/108/EG and Low-voltage Directive 2006/95/EG.

Interference resistance and interference emissions are factors which are heavily influenced by the type and quantity of CPCI cards used in the system assembly. Through the use of high quality line filters and EMC optimized enclosure design, SCHROFF offers CPCI systems which serve as an ideal base for system integrators, which comply with the prescribed limits of EN 6100-6-3 and EN 61000-6-2

The systems are generally equipped with power supplies which possess CE markings in accordance with EN 60950-1, EN 61000-6-3, EN 61000-6-2).

Before delivery a high-voltage, protective earth and functionality test is carried out on each individual system.

### 4.3 Scope of Delivery

| Quantity | Description   |
|----------|---|
| 1        | Shielded europacPRO chassis 4 U / 84 HP with front handles  |
| 1        | CPCI Serial backplane 9 slot 3 U with Single Star Ethernet topology   |
| 1        | Front card cage for max. 9 boards 3 U 160 mm deep<br>IEEE guide rails inc. ESD clips)                                     |
| 1        | 300 W ATX power supply with input range of 100 VAC to 240 VAC, IEC320-C14 connector and mains/line switch.<br>12 V / 22 A |
| 1        | Complete AC/DC cabling  |
| 1        | Fan Tray 1 HP with 2 fans 140 m <sup>3</sup> /h (85 cfm) each   |
| 1        | Drive holder for a slim line DVD drive  |
| 1        | Drive holder with front panel 3 U, 8 HP for a 3,5" HDD  |
| 1        | Front panel 3 U, 8 HP   |
| 1        | Front panel 3 U, 84 HP  |
| 1        | 19" rack mounting kit   |

Please order the power cable separately.

### 4.4 Accessories

| Order No. | Description  |
|-----------|--|
| 20848-75x | Front panels for Rear I/O Boards, dimensions see catalogue   |
| 24579-033 | Air filter kit   |
| 20848-7xx | Slot covers with front panel and EMC shielding for vacant slots. For dimensions, please see catalogue. |
| 34562-8xx | Slot covers for vacant slots. For dimensions, please see catalogue.                                    |
| 24579-03x | Printed Circuit Board covers (solder side covers). For dimensions, please see catalogue                |

### 4.5 Spare Parts

On request.


## 5 Technical Data

Table 2: Technical Data

| <b>Dimensions</b>                     |  |
|---------------------------------------|--|
| Height                                | 4 U  |
| Width                                 | 482.60 mm (19")  |
| Depth (Card cage)                     | 275 mm   |
| Depth (Overall with handles)          | 322 mm   |
| <b>Weight</b>                         |  |
| Completely assembled                  | approx. 7,5 kg   |
| <b>Power Supply</b>                   |  |
| Input Voltage                         | 100 VAC to 240 VAC   |
| Frequency                             | 50 / 60 Hz   |
| Power input                           | up to 300 W  |
| <b>Cooling</b>                        |  |
| 2 x 12 VDC fans                       | 140 m <sup>3</sup> /h (85 cfm) each, free blow   |
| <b>Ambient Temperature</b>            |  |
| Operation                             | +0 °C to +50 °C  |
| Storage                               | -40 °C to +85 °C   |
| <b>Humidity</b>                       |  |
| Admissible humidity                   | 30 % to 80 %, non-condensing   |
| <b>EMC, fulfils requirements for:</b> |  |
| Transient Emissions                   | EN 61000-6-3   |
| Interference Resistance               | EN 61000-6-2   |
| <b>Safety</b>                         |  |
| Test voltages according to EN 60950   | Input - Output: 4,3 kVDC<br>Input - PE: 2,2 kVDC<br>Output - PE: 0,7 kVDC<br>Output - Output: 0,7 kVDC |
| Shock and vibration:                  | EN 60068-2-6 and EN 60068-2-27   |
| <b>Electromagnetic Shielding</b>      |  |
| Shielding attenuation                 | typ. 40 dB at 1 GHz if shielded front panels are used.   |

## 6 Dimensions

Figure 7: Dimensions

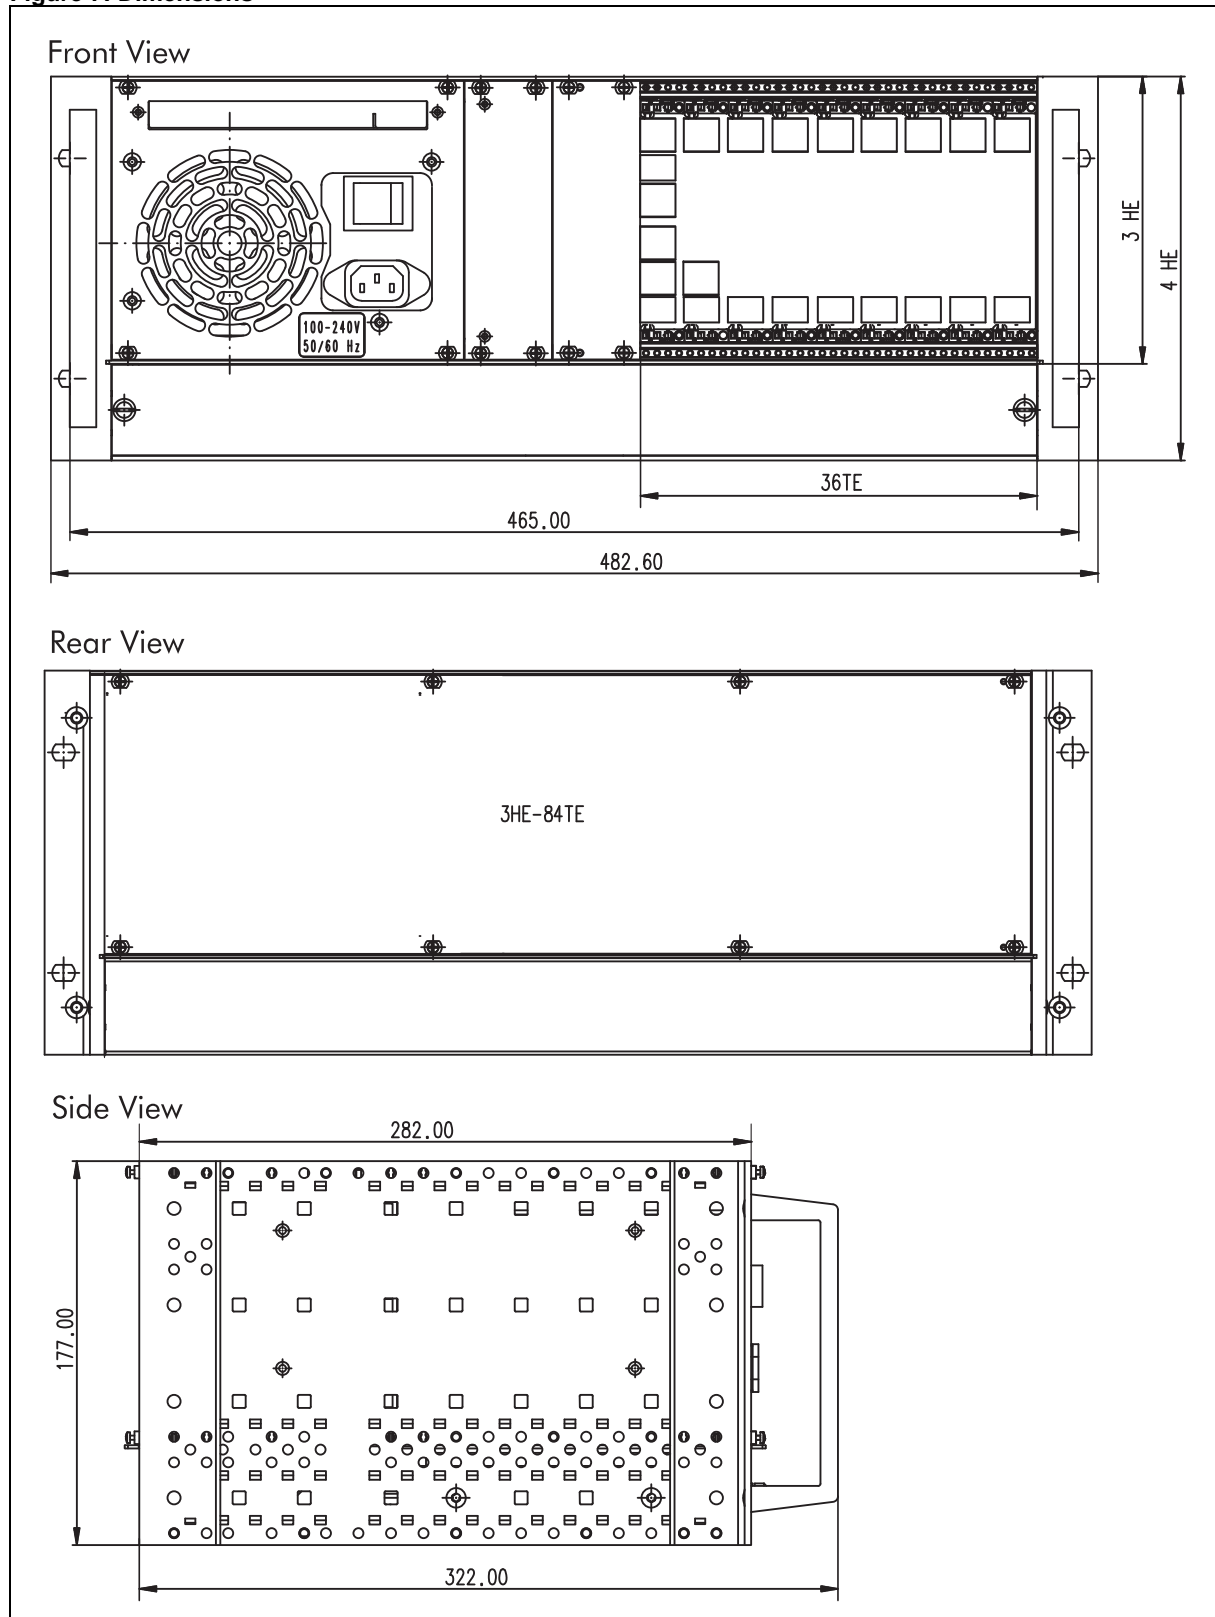



**SCHROFF GMBH**

**[www.schroff.biz](http://www.schroff.biz)**

**Langenalberstr. 96-100  
D-75334 Straubenhardt**

**Tel.: + 49 (0) 7082 794-0**

**Fax: +49 (0) 7082 794-200**